


Seat Ibiza IV 6J (2008-2017) fuse box diagrams & schemes

Left side of dash panel

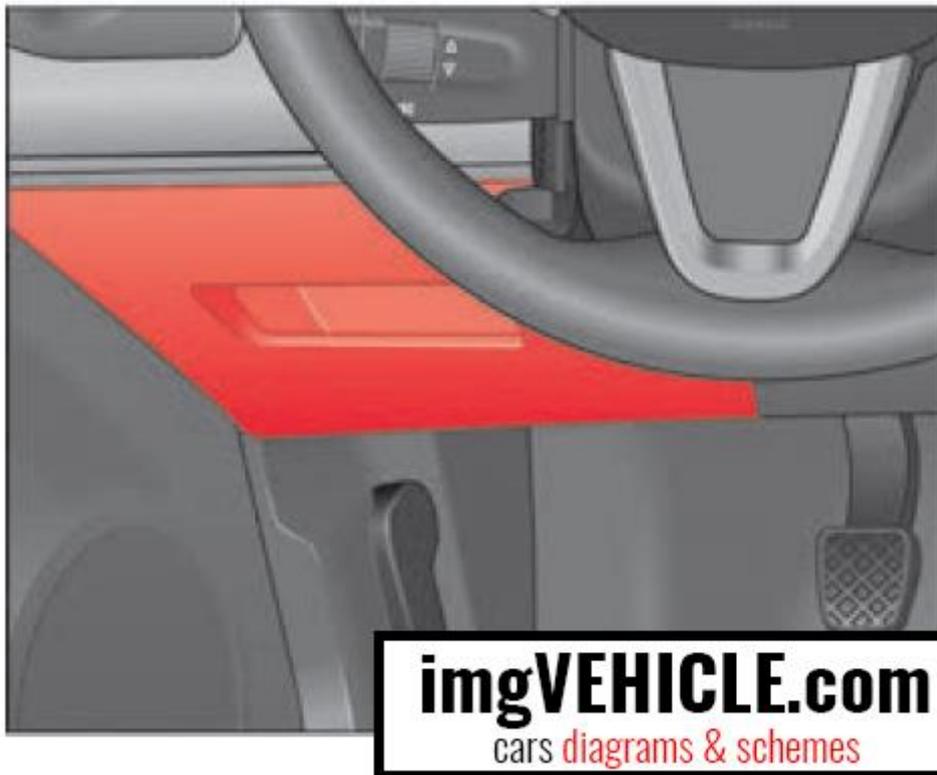

This fuse box is also for: SportCoupé (SC), Estate Car(ST) and Connect.

Never repair damaged fuses and never replace them with fuses with a higher rating. Failure to comply could result in fire. This could also cause damage to other parts of the electrical system.

If a newly replaced fuse blows again after a short time, the electrical system must be checked by a qualified workshop as soon as possible.

If you replace a fuse with higher-rating fuse, you could cause damage to another location in the electrical system.


Always keep some spare fuses in the vehicle. These are available from SEAT dealers

Number	Consumer	Amps
1	Power steering/Engine operation	7,5
2	Diagnostics/Heater/Autoclimate/Climatronic/ Electric anti-dazzle mirror/Navigator/ Air conditioning pressure switch/ Climate fan/ Kisi/ AFS Control unit/Coming home relay/Soundaktor	10
3	Petrol engine control unit/Flow meter/Diesel engine control unit/Relay coils/Engine operation/ Bi-turbo fuel control unit	5
4	ABS/ESP switch (turning sensor)/Light lever	10

Number	Consumer	Amps
5	Reverse light/Heating nozzles	10
6	Instrument panel	5
7	Rear fog light	5
8	Vacant	
9	Headlight lever	10
10	Headlight lever/Clutch (Petrol)/Brakes (all)	5
11	Airbag control unit	5
12	Automatic gearbox/ Headlight lever	10
13	Exterior mirror control	5
14	Left-hand AFS headlights	15
15	Right-hand AFS headlights	15
16	12V power socket in luggage compartment	15
17	Number plate light /Dimmer /Side light indicator light	5
18	Dimmer	5
19	Electronic control unit	5
20	Turn signals	15
21	Lights control/ Instrument panel	5
22	Electronic control unit/ Heated mirrors	5
23	Engine injection module/ Rain sensor/ Gear lever/ Starter relay	7,5
24	Glove compartmentlight/ Luggage compartment light/ Interior light	10
25	Parking aid	5
26	Towing hook	
27	12 Volt Input/Cigarette lighter	15
28	Lambda probe	10
29	Engine power supply	20
30	Petrol engine operation	10
31	Petrol engine operation/Glow plugs/Relay coil/Bi-turbo electric fan	10
32	Engine control unit	15

Number	Consumer	Amps
33	Clutch switch power supply/preheating relay	5
34	Fuel control unit / Bi-turbo engine supply	15
35	Heated seats control unit/ Console area switch panel (cup holder)	25
36	Main beam headlight, right	10
37	Main beam headlight, left/ComingHome	10
38	Electric fan motor	30
39	Vacant	-
40	Vacant	-
41	Vacant	-
42	Horn	20
43	Panorama roof	30
44	Windscreen wipers	20
45	Heated rear window	30
46	Radio/telephone VDA/Bluetooth/Steering column controls	20
47	Climatronic/autoclimate	5
48	Locking unit	25
49	Front electric window	30
50	Rear electric windows	30
51	Automatic gearbox control unit	30
52	Alarm/Volume sensor	15
53	Electro-kinetic pump relay/bi-turbo fuel control unit	15
54	Reverse light for automatic gearbox/ Fog light	15
55	Transformer on	15
56	Rear windscreen wiper	10
57	Dipped beam headlight (right side)	15
58	Dipped beam headlight (left side)	15

Engine compartment above battery

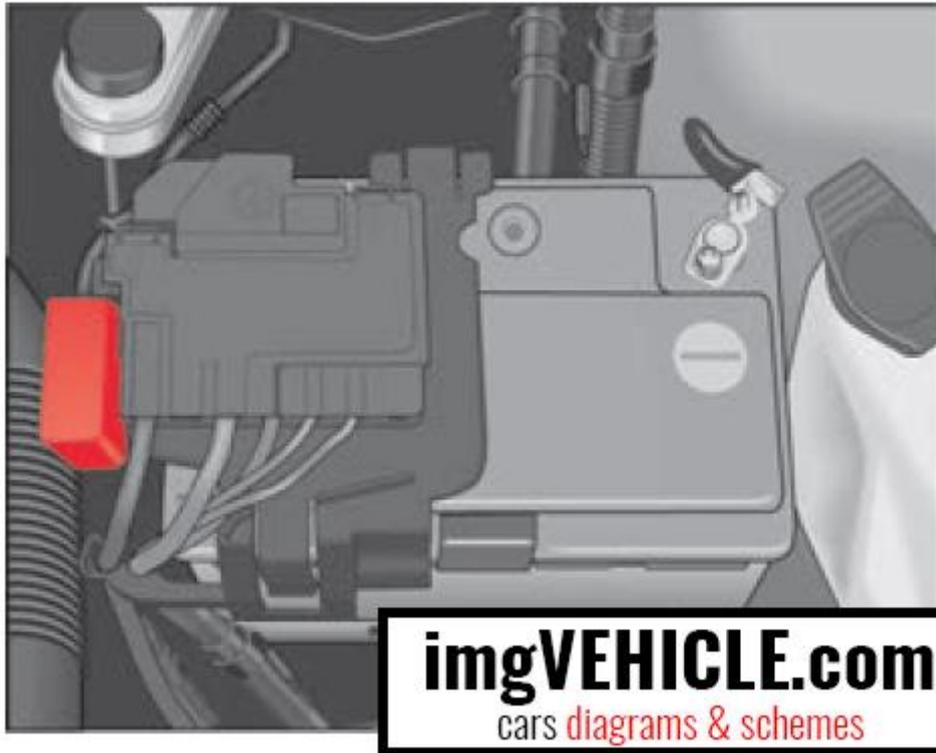

Number	Consumer	Amps
1	ABS unit	25
2	Electroblower clima heater/fan	30
3	Climate fan	5
4	ABS unit	10
5	Electronic control unit	5
6	Injection module	30