



Engine speed sender, Lambda probe, Fuel pressure sender, Engine control unit

- G28 – Engine speed sender
 G39 – Lambda probe
 G247 – Fuel pressure sender
 J519 – Onboard supply control unit
 J623 – Engine control unit, central in plenum chamber
 T6k – 6-pin connector
 T60a – 60-pin connector
 T94a – 94-pin connector
 Z19 – Lambda probe heater
 220 – Earth connection (sender earth), in engine wiring harness
 D141 – Connection (5V) in engine prewiring harness
 * – Only models with Euro 5 emission standard


ws	= white	gr	= grey
sw	= black	li	= purple
ro	= red	vi	= purple
rt	= red	ge	= yellow
br	= brown	or	= orange
gn	= green	rs	= pink
bl	= blue	blk	= uninsulated
tk	= turquoise		

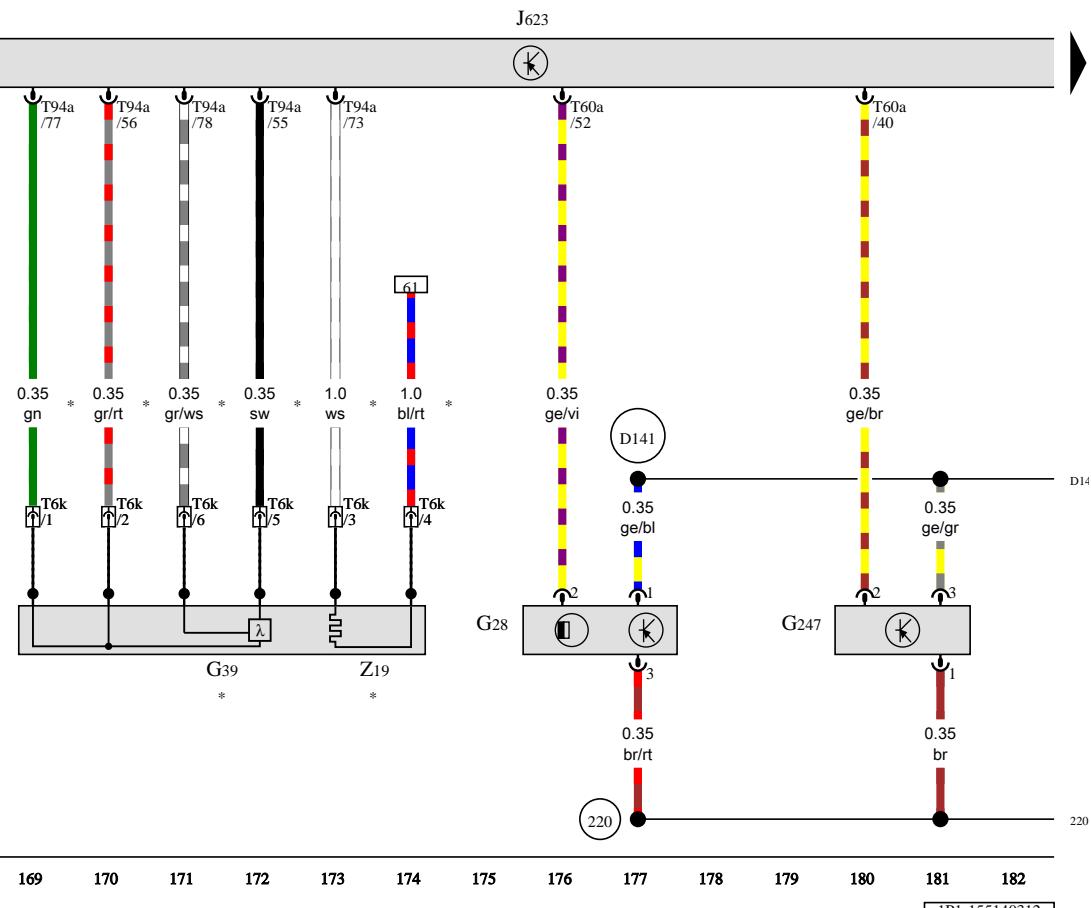

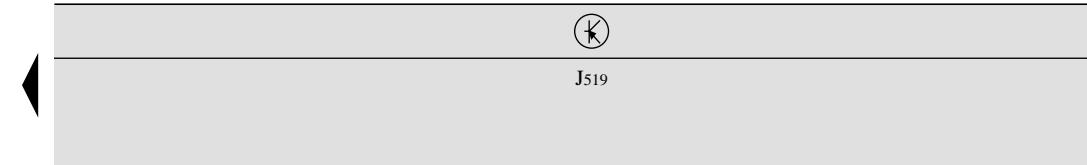



**Fuel temperature sender, Position sender for charge pressure positioner,
Throttle valve module, Engine control unit**

 - G69 – Throttle valve potentiometer
- G81 – Fuel temperature sender
- G581 – Position sender for charge pressure positioner
- J338 – Throttle valve module
- J519 – Onboard supply control unit
- J623 – Engine control unit, central in plenum chamber
- T60a – 60-pin connector
- 220 – Earth connection (sender earth), in engine wiring harness
- D141 – Connection (5V) in engine prewiring harness




ws	= white	gr	= grey
sw	= black	li	= purple
ro	= red	vi	= purple
rt	= red	ge	= yellow
br	= brown	or	= orange
gn	= green	rs	= pink
bl	= blue	blk	= uninsulated
tk	= turquoise		

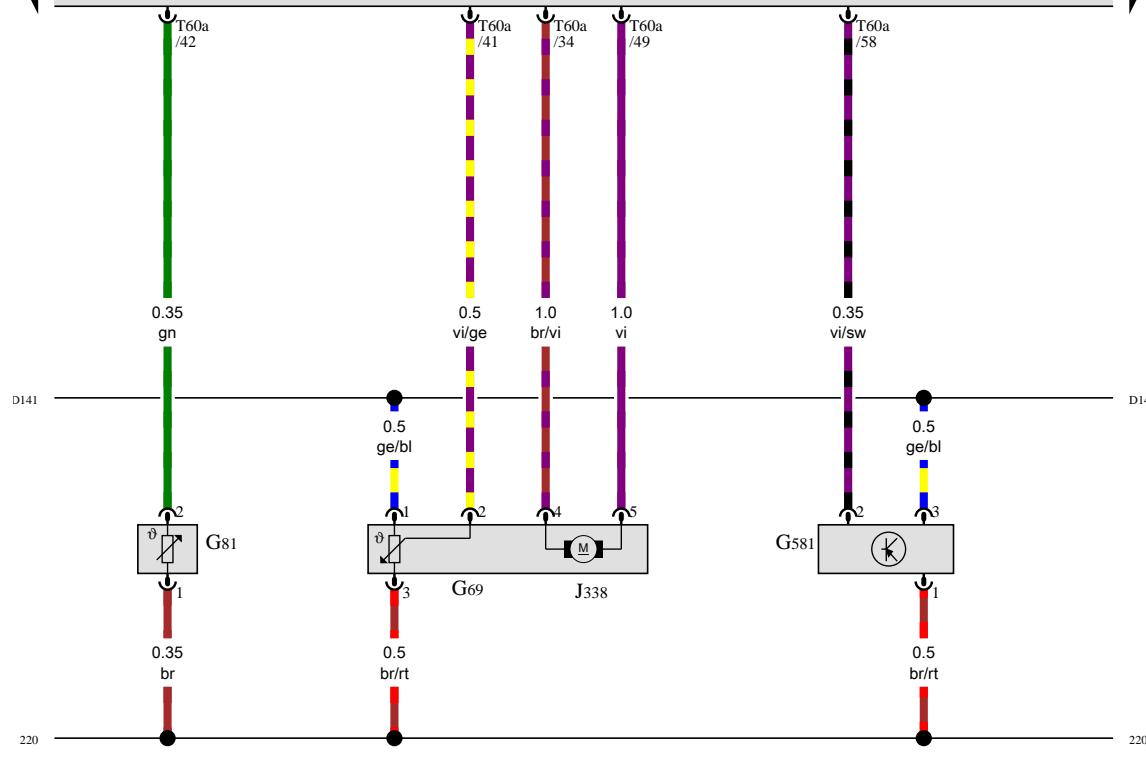

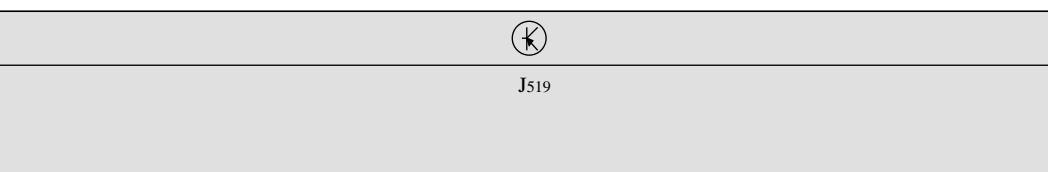

Engine control unit, Exhaust gas recirculation valve, Charge pressure control solenoid valve, Exhaust gas recirculation cooler changeover valve

- G212 – Exhaust gas recirculation potentiometer
- J519 – Onboard supply control unit
- J623 – Engine control unit, central in plenum chamber
- N18 – Exhaust gas recirculation valve
- N75 – Charge pressure control solenoid valve
- N345 – Exhaust gas recirculation cooler changeover valve
- T14a – 14-pin connector, near front left longitudinal member
- T60a – 60-pin connector
- T94a – 94-pin connector
- 220 – Earth connection (sender earth), in engine wiring harness
- D102 – Connection 2 in engine compartment wiring harness
- D141 – Connection (5V) in engine prewiring harness

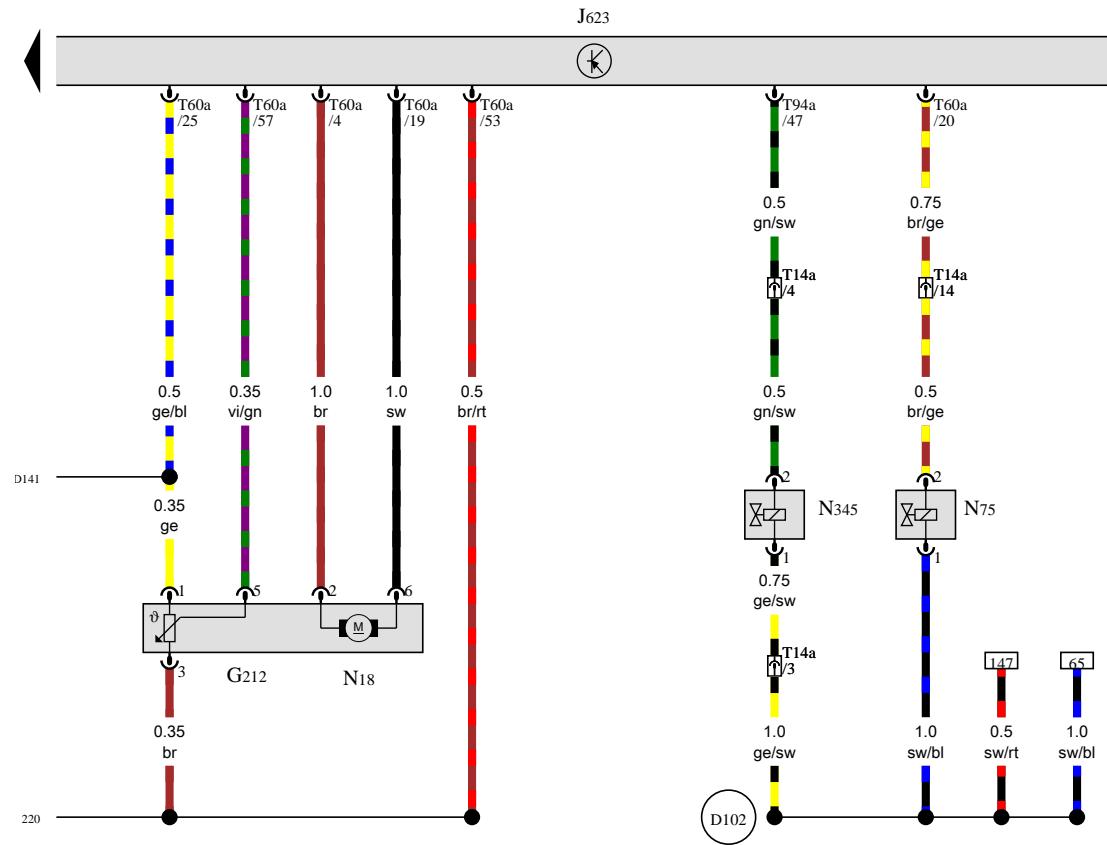

ws	= white	gr	= grey
sw	= black	li	= purple
ro	= red	vi	= purple
rt	= red	ge	= yellow
br	= brown	or	= orange
gn	= green	rs	= pink
bl	= blue	blk	= uninsulated
tk	= turquoise		