

- To check gear oil, remove oil plug -arrow-.



#### Note


- ◆ Oil level is correct when the oil reaches the bottom edge of filling hole.
- ◆ The type of bolt depends on the material used to make the gearbox; this may be magnesium or aluminium . Allocation of the corresponding bolt ⇒ Electronic parts catalogue .

- Tighten bolt -arrow- to specified torque ⇒ [page 108](#) .

If the container must be completely filled with oil, note the following:

Gear oil specification ⇒ [page 6](#)


- Remove bolt -arrow-.
- Fill with gear oil to lower edge of filler hole
- Screw in bolt -arrow-.
- Leave engine running, engage a gear and allow gearbox to rotate for about 2 minutes.
- Stop engine and remove bolt -arrow-.
- Top up with gear oil to lower edge of filler hole.
- Tighten bolt -arrow- to specified torque ⇒ [page 108](#) .

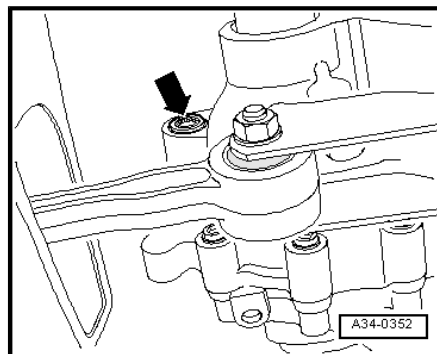

#### Various versions of oil filler and drain plug

I - Oil filler plug/oil drain plug with multi-point socket head, 25 Nm


II - Oil filler plug/oil drain plug with hexagon socket head, 30 Nm

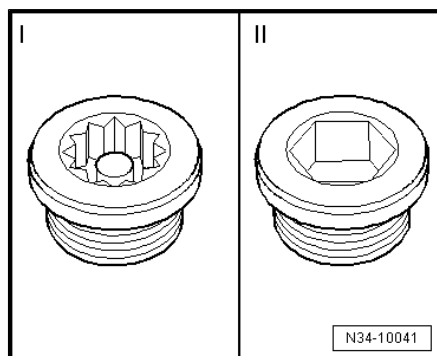

## 4.2 Renewing gear oil

- Raise the vehicle and remove the left front wheel.
- Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted without the written consent of SEAT S.A. SEAT S.A. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.  
remove the central sound proofing ⇒ Exterior body installation work; Rep. gr. 50
- Remove the left sound insulation ⇒ Bodywork, exterior installation work; Rep. gr. 66 .

- Unscrew drain plug -arrow- and empty gearbox oil.

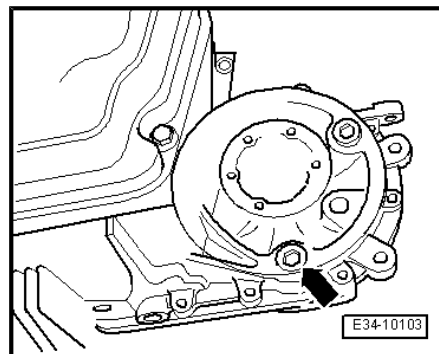


- Unscrew oil level test and filler plug -arrow-.
- Tighten the gearbox oil discharge cap to a torque of 25 Nm.



**Note**

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by SEAT S.A. SEAT S.A. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.

- ◆ *Oil level is correct when the oil reaches the bottom edge of filling hole.*
- ◆ *The type of bolt depends on the material used to make the gearbox; this may be magnesium or aluminium . Allocation of the corresponding bolt ⇒ Electronic parts catalogue .*

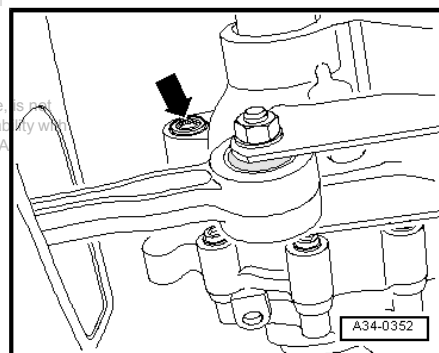

**If the container must be completely filled with oil, note the following:**

Gear oil specification ⇒ [page 6](#)

- Fill with new gear oil up to the correct level.
- Unscrew control lid, start engine and let the gears work with engaged gear for about 2 minutes.
- Stop the engine, remove oil cap and check level again, top up if necessary.
- Tighten bolt -arrow- to specified torque ⇒ [page 109](#) .
- Install the left and the middle soundproofing again
- Fit the left front wheel.

**Various versions of oil filler and drain plug**

I - Oil filler plug/oil drain plug with multi-point socket head, 25 Nm

II - Oil filler plug/oil drain plug with hexagon socket head, 30 Nm

