


- Hook cover -1- into dust and pollen filter -2- -arrow -.



### WARNING

***Danger of damaging the fresh air blower - V2- when eliminating impurities from the dust and pollen filter.***

***Take care to ensure that the cover plate - T10532- is not removed as well.***

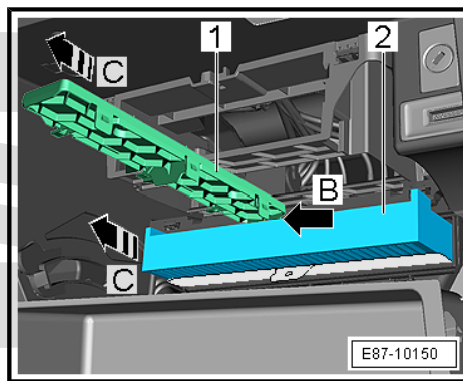

- Take out the dust and pollen filter -2- with the cover -1- in the direction of arrow C-.
- Using a conventional vacuum cleaner, remove residual dirt and leaves from the cover plate - T10532- .



### Note

***Please observe disposal instructions!***

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by SEAT S.A. SEAT S.A. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.

### Installing

Installation is carried out in the reverse order. When installing observe the following:



### Note

***If you assume that impurities have entered the fresh air blower - V2- , remove and clean the fresh air blower ⇒ Rep. gr. 87 .***

- Observe installation position of dust and pollen filter.
- Switch on the ignition and check the operation of the fresh air turbine - V2- .

## 5.13 Removing and installing fresh air blower - V2-

### Removing

- Switch off ignition and all electrical consumers.

#### Vehicles without access and start authorisation system

- Remove ignition key, if inserted.


#### Vehicles with access and start authorisation system

- Store the ignition key outside the vehicle to prevent the ignition from being switched on unintentionally.


#### Continuation for all vehicles

- Remove the lower glove compartment trim ⇒ General body repairs, interior installation work; Rep. gr. 68 ; Shelves / Covers; Assembly overview - glove compartment .


- Use a screwdriver to unfasten the quick-release fastener -1-.

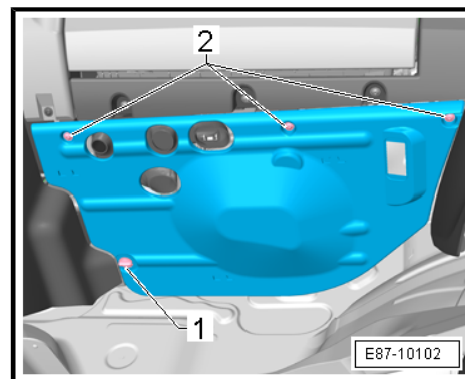

- Loosen bolts -2-.
- Unscrew bolt -3-.

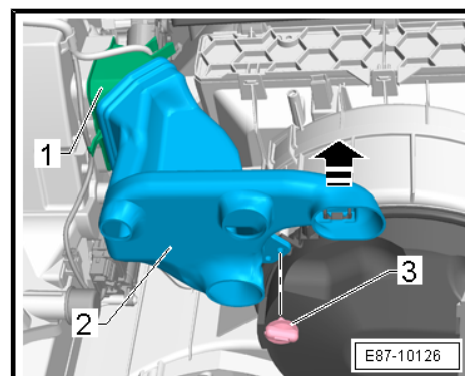

- Disengage the retaining tab -arrow- and remove the vent -2- from the air distributor body -1-.
- Disconnect connector -3-.
- Undo the fixing screw -2- of the air nozzle.
- Lift the locking lug -4- and turn the fresh air blower -1- clockwise -arrow-.
- Pull the fresh air blower out of the bottom part of the evaporator housing.

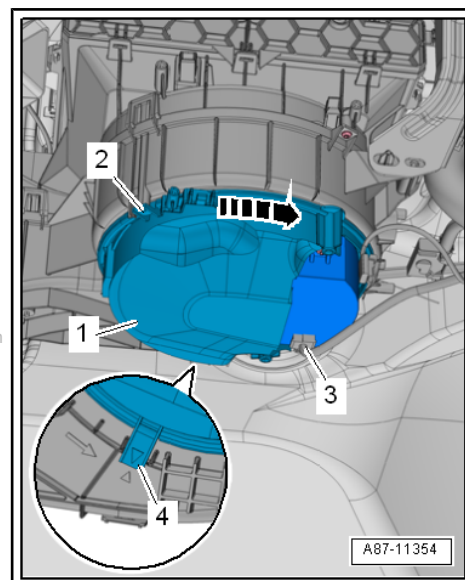

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by SEAT S.A. SEAT S.A. does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.

#### Caution

#### Fan impeller imbalance.

- ◆ *Do not grasp hold of the impeller of the fresh air blower - V2-. Applying force to the impeller or moving the balancing weights attached to the impeller could cause imbalance and thus operating problems.*

### Installing

Installation is carried out in the reverse order. When installing observe the following:

- Specified torque  
⇒ ["5.2 Assembly overview - add-on parts of heater and air conditioning unit and of air intake box", page 109](#)

## 5.14 Removing and fitting fresh air blower control unit - J126-

### Removing

- Switch off ignition and all electrical consumers.

### Vehicles without access and start authorisation system


- Remove ignition key, if inserted.

### Vehicles with access and start authorisation system


- Store the ignition key outside the vehicle to prevent the ignition from being switched on unintentionally.

### Continuation for all vehicles

- Remove the lower glove compartment cover ⇒ General body repairs, interior installation work; Rep. gr. 68 ; Shelves / Covers; Assembly overview - glove compartment .
- Use a screwdriver to unfasten the quick-release fastener -1-.
- Fixing screws -2- of the bottom cover

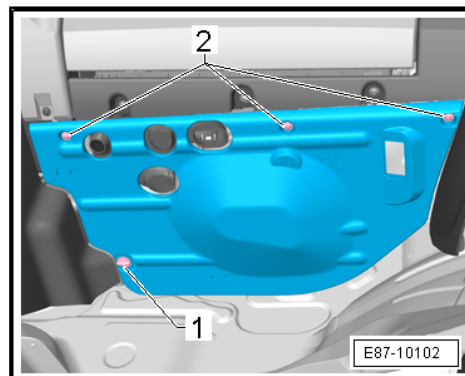

- Remove the bottom cover -3-.
- Separate connectors -1, 2-.
- Unscrew bolts -arrows-.
- Remove the fresh-air blower control unit from the bracket - J126- -3-.

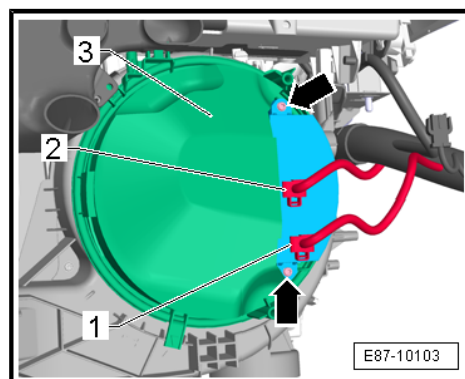

### WARNING

#### *Risk of scalding.*

- ◆ *The fresh air blower - V2- with fresh air blower control unit - J126- may be hot if it was in operation prior to removal.*
- ◆ *Do not grasp hold of the hot cooling surface at the fresh air blower control unit - J126- .*

### Installing

Installation is carried out in the reverse order. When installing observe the following:

- Specified torque  
⇒ [“5.2 Assembly overview - add-on parts of heater and air conditioning unit and of air intake box”, page 109](#)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by SEAT S.A. SEAT S.A does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by SEAT S.A.