




WARNING

- ◆ **Observe safety regulations for pyrotechnic components**
⇒ **page 3**.
- ◆ **Before handling pyrotechnic components (e.g. connecting the electrical connector), the person handling them must ensure that he/she is "electrically discharged". for example by briefly grasping hold of door striker plate.**
- ◆ **Observe all measures to be taken when installing the front seat** ⇒ **page 255**.

- Replace damaged cable ties and clips.
- Lay the cables so that they are back in the same place again.

Observe tightening torque and sequence for the seat rests.

stage	Bolt.	Tightening torque
1	-1...4-	Screw in by hand until they make contact
2	-1-	33 Nm
3	-2-	33 Nm
4	-3-	33 Nm
5	-4-	33 Nm

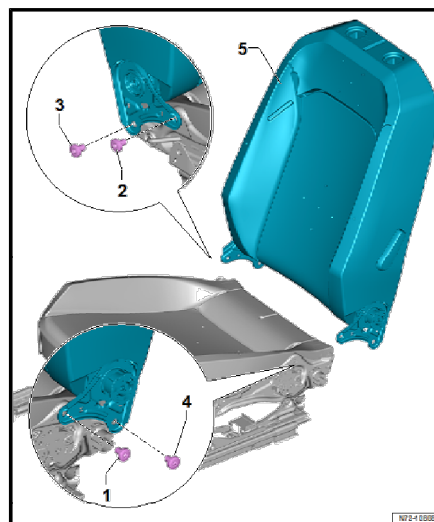

2.18 Remove and install head restraint



Note


- ◆ *The head restraints can be removed with the front seats in position.*
- ◆ *The release button is located behind the seat cushion.*

Removing

- Move front seat as far forwards and down as possible and tilt backrest to approx. 45°.
- Press the release button -2-, located about "10 cm" below the upper part of the seat back.
- At the same time, move the headrests -1- in the direction of the -arrow-.
- Pull head restraint out of backrest.

fitting

Installation is done in reverse order of removal operations

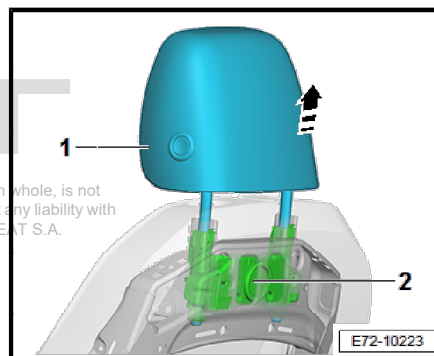

2.19 Remove and install head restraint guide

Special tools and workshop equipment required