

SEAT Leon MK4: Coming / Leaving Home Function

Your suspicion about the Eco LED headlamps is completely correct. In the SEAT Leon MK4, the automatic Coming Home and Leaving Home features are software-locked and hardware-restricted based on your headlight trim. Vehicles equipped with standard Eco LED headlights lack the ambient light and rain sensor required to trigger the automatic function natively, which is why the settings are hidden from your screen.

How to Use the Manual Coming Home Function

Even without the automatic hardware pack, you can activate the function manually before leaving your vehicle:

- **Step 1:** Turn off the engine and switch the ignition completely off.
- **Step 2:** Pull the high-beam stalk toward you once (like flashing your headlights) before opening the driver's door.
- **Step 3:** Open and exit the door. Your Eco LED headlights will stay illuminated for roughly 30 seconds to light your path, then turn off automatically.

How to Permanently Enable the Feature

If you want the options to appear on your infotainment system screen, you have two choices:

- **Software Coding (OBDEleven / VCDS):** You can use a VAG diagnostic tool to force-enable the hidden menus. Because your car lacks a light sensor, you must code it as 'time-controlled'. The lights will turn on every time you lock or unlock the car, even in broad daylight.
- **Hardware Retrofit:** For full automatic functionality (only activating when it is dark), you need to replace your rearview mirror base with a combined Rain, Light, and Humidity Sensor (RLHS) and install a headlight switch that includes the 'AUTO' position.